

SPACER

Spacer is used to make-up small increments in length

DN L	Type	15 Cat. Ref.	25 Cat. Ref.	40 Cat. Ref.	50 Cat. Ref.
5	A	ASS07/5	ASS1/5	ASS1.5/5	ASS2/5
15	A	ASS07/15	ASS1/15	ASS1.5/15	ASS2/15
25	A	ASS07/25	ASS1/25	ASS1.5/25	ASS2/25
50	B	ASS07/50	ASS1/50	ASS1.5/50	ASS2/50